

# DATASHEET


## MOUNTING SPECIFICATIONS FOR PLASTER RING

### STEP 1

- Drill a hole in the ceiling with a hole saw of  $\varnothing 88\text{mm}$

#### WHAT YOU NEED:

- Hole saw -  $\varnothing 88\text{mm}$
- Drill

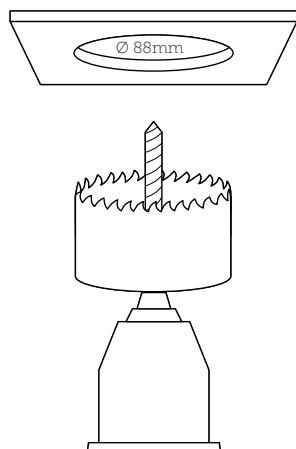


### STEP 2

- Place the plaster ring in the borehole and screw the plaster ring with drywall screws


#### WHAT YOU NEED:

- 5x countersunk plasterboard screws
- Screwdriver

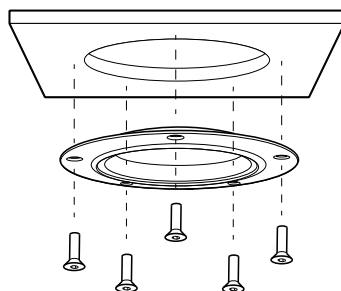

### STEP 3

- Plaster the ceiling

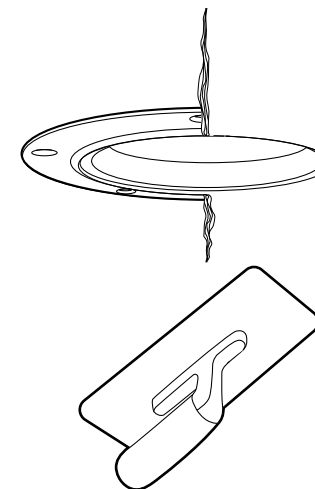

Note: Do not plaster higher than the inner edge of the plaster ring and prevent plaster from entering the ring

