

DATASHEET



MOUNTING SPECIFICATIONS FOR SPRING CLIP

STEP 1

- Drill a hole in de ceiling with a hole saw of \varnothing 76mm

WHAT YOU NEED:

- Hole saw - \varnothing 76mm
- Drill

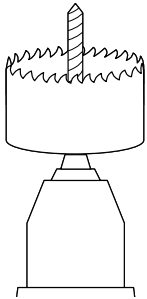

STEP 2

- Install the spots

STEP 3

- Squeeze in de the springs of the spot and place the spot in the ceiling hole

